



# Azpen A720 Speaker Replacement

This guide will tell you how to replace the speaker in your Azpen A720 tablet.

Written By: Anna



## INTRODUCTION

The speaker is responsible for all non-headphone sounds from your tablet. If these sounds are not audible when they should be you may need to replace the speaker. Speaker replacement is a relatively easy task and this guide will help you through it.

 
---



### TOOLS:


- [Soldering Station](#) (1)
  - [Magnetic Project Mat](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Back Cover (Prerequisite)

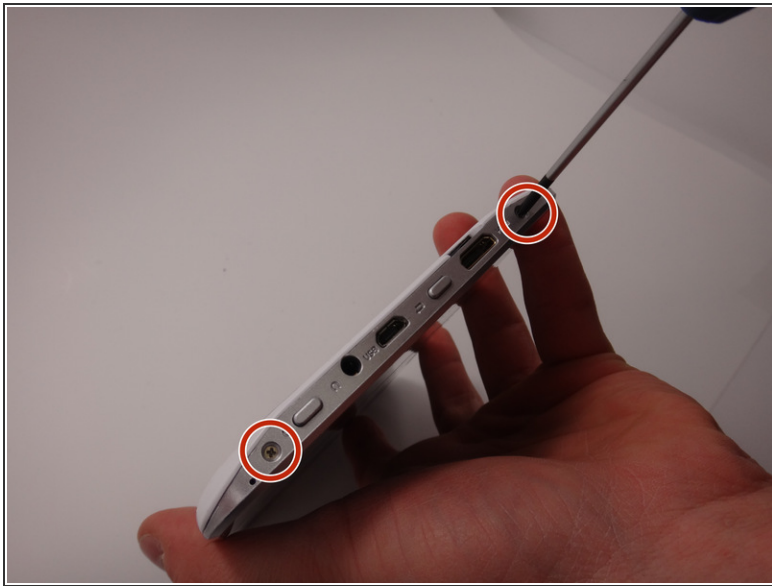

- Use the Phillips # 00 screwdriver to remove the two 4mm screws found on the top edge of the tablet near the power button and HDMI mini port.


## Step 2

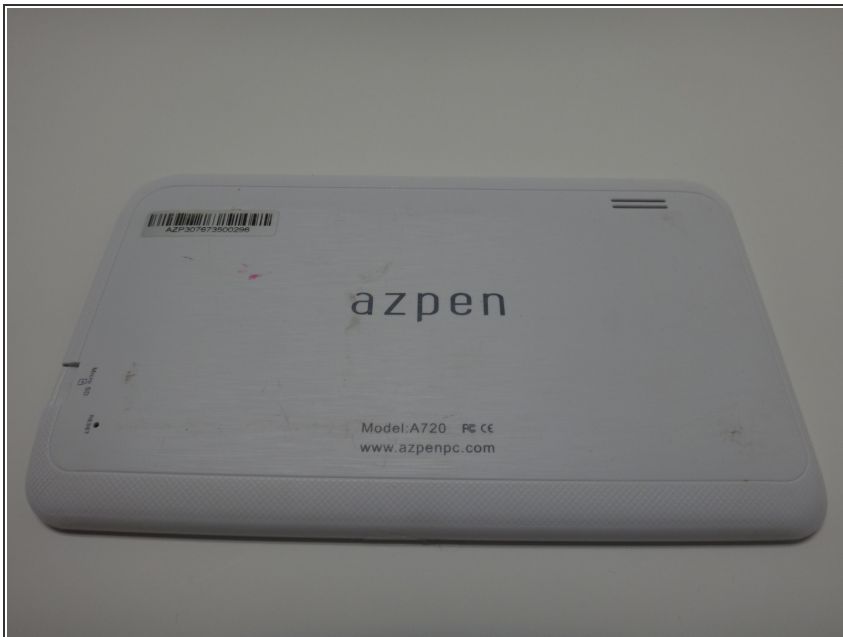 

- Lay the tablet screen-side down



### Step 3

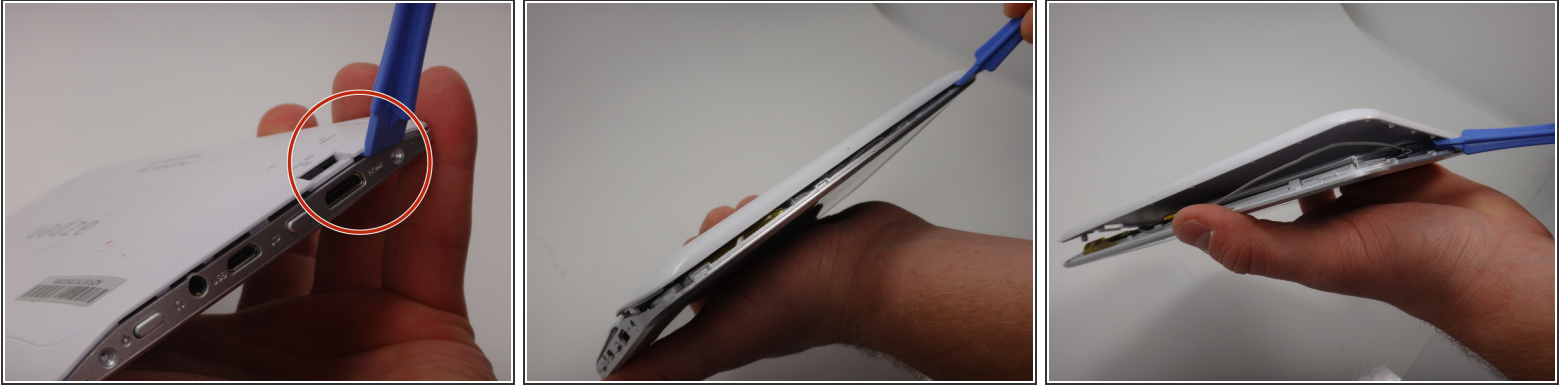 

- Use the plastic opening tool to pry the white back from the silver frame. Start near the micro SD slot.
- Slide the plastic opening tool around the perimeter of the casing until the back is disconnected.

### Step 4



 
- Take the cover off your tablet.

## Step 5 — Speaker



- Locate the speaker, it is a black oval in the corner near the battery.

## Step 6

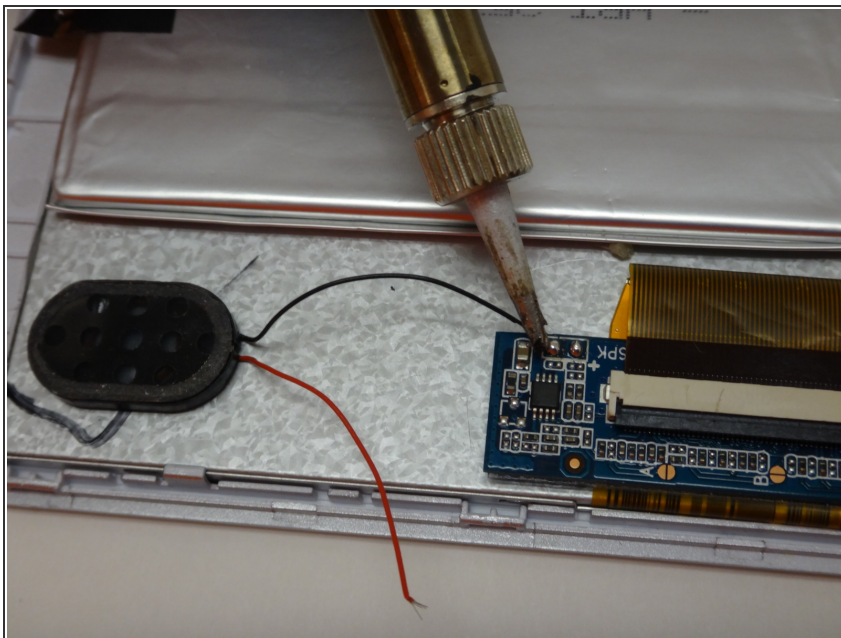

- Use a soldering iron to melt the connections between the black and red speaker wires and the motherboard.
- ⚠ The soldering iron gets very hot, be careful not to touch the tip and burn yourself. To learn to solder click [here](#).

## Step 7



- Remove the speaker, it is a magnet and is loosely attached to the metal backing.
- Replace the speaker with a new one.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 11:46:08 PM.